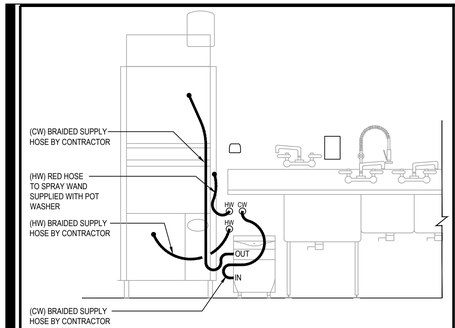

W. SOFTN'R/POT WSH'R HOSE DIAG. 19

Scale: NO SCALE P-500

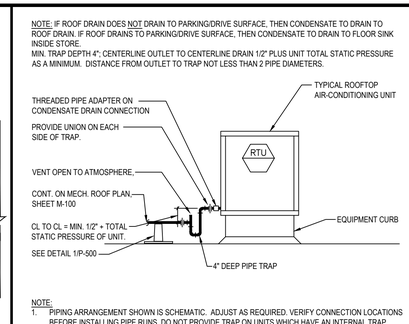

NOTE: IF ROOF DRAIN DOES NOT DRAIN TO PARKING/DRIVE SURFACE, THEN CONDENSATE TO DRAIN TO ROOF DRAIN. IF ROOF DRAINS TO PARKING/DRIVE SURFACE, THEN CONDENSATE TO DRAIN TO FLOOR SINK INSIDE STORE.
MIN. TRAP DEPTH 4". CENTERLINE OUTLET TO CENTERLINE DRAIN 1/2" PLUS UNIT TOTAL STATIC PRESSURE AS A MINIMUM. DISTANCE FROM OUTLET TO TRAP NOT LESS THAN 2 PIPE DIAMETERS.

NOTE:
1. PIPING ARRANGEMENT SHOWN IS SCHEMATIC. ADJUST AS REQUIRED. VERIFY CONNECTION LOCATIONS BEFORE INSTALLING PIPE RUNS. DO NOT PROVIDE TRAP ON UNITS WHICH HAVE AN INTERNAL TRAP.
2. DRAIN LINES TO BE TYPE L COPPER.
3. FOR BLOW-THROUGH TYPE EQUIPMENT, ADJUST PTRAP DEPTH TO 1/2" PLUS TOTAL STATIC PRESSURE OF UNIT.

A.C. UNIT CONDENSATE DRAIN 16

Scale: NO SCALE P-500

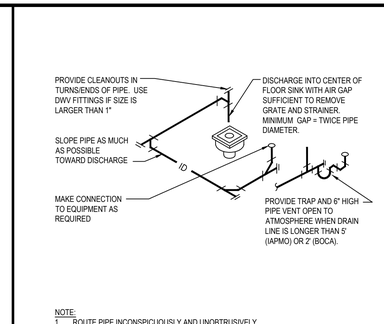

NOTE:
1. ROUTE PIPE INCONSPICUOUSLY AND UNOBTRUSIVELY.
2. HANG PIPE AS REQUIRED.
3. DO NOT INSULATE INDIRECT DRAIN PIPE WHEN INSTALLED IN FOOD SERVICE FACILITY. REFER TO LOCAL CODES FOR FURTHER INFORMATION.

INDIRECT DRAIN 12

Scale: NO SCALE P-500

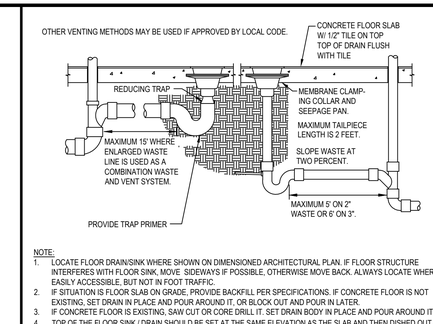

NOTE:
1. LOCATE FLOOR DRAIN/SINK WHERE SHOWN ON DIMENSIONED ARCHITECTURAL PLAN. IF FLOOR STRUCTURE INTERFERES WITH FLOOR SINK, MOVE SIDEWAYS IF POSSIBLE, OTHERWISE MOVE BACK. ALWAYS LOCATE WHERE EASILY ACCESSIBLE, BUT NOT IN FOOT TRAFFIC.
2. IF SITUATION IS FLOOR SLAB ON GRADE, PROVIDE BACKFILL PER SPECIFICATIONS. IF CONCRETE FLOOR IS NOT EXISTING, SET DRAIN IN PLACE AND POUR AROUND IT, OR BLOCK OUT AND POUR AS A LATER.
3. IF CONCRETE FLOOR IS EXISTING, SAW CUT OR CORE DRILL IT. SET DRAIN BODY IN PLACE AND POUR AROUND IT.
4. TOP OF THE FLOOR SINK / DRAIN SHOULD BE SET AT THE SAME ELEVATION AS THE SLAB AND THEN DISHED OUT ¼" AT THE DRAIN SLOPING TO NOTHING AT THE 2' RADIUS POINT.
5. IF SITUATION IS FLOOR NOT ON GRADE, REFER TO "FLOOR PENETRATION" DETAIL FOR VENTS.
6. PROVIDE TRAP PRIMER FOR FLOOR DRAINS IN RESTROOMS.

FLOOR DRAIN/SINK 8

Scale: NO SCALE P-500

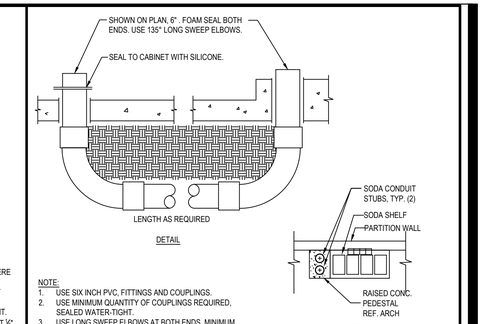

NOTE:
1. USE SIX INCH PVC, FITTINGS AND COUPLINGS.
2. USE MINIMUM QUANTITY OF COUPLINGS REQUIRED, SEALED WATER-TIGHT.
3. USE LONG SWEEP ELBOWS AT BOTH ENDS, MINIMUM TWENTY FOUR INCH RADIUS.
4. AVOID ELBOWS IN HORIZONTAL RUN IF AT ALL POSSIBLE.
5. DO NOT USE 45° ELBOWS.

BELOW-GROUND SODA CONDUIT 4

Scale: NO SCALE P-500

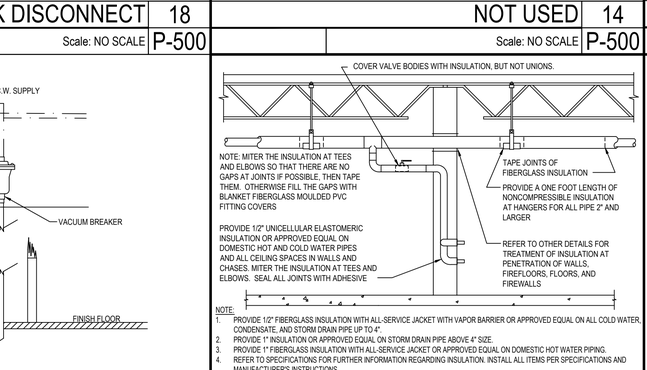

NOTE:
1. CONTRACTOR TO COORDINATE WITH PANDA PROJECT MANAGER ON EXACT CONFIGURATION PRIOR TO CONSTRUCTION
2. PEX LINES FROM MANIFOLD TO EQUIPMENT TO RUN CONCEALED WITHIN WALL AND STUB OUT @ 5 FT A.F.F. WITH COPPER. REFER TO PEX STUB OUT DIAGRAM ON SHEET P-400

BAG-N-BOX DETAIL 15

Scale: NO SCALE P-500

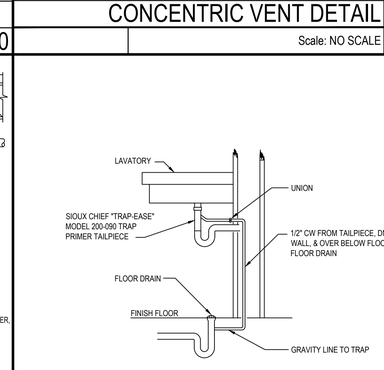

NOTE:
1. LOCATE AT BUILDING EXIT, AT ENDS OF RUNS, AT TURNS OF PIPE GREATER THAN 45 DEGREES, AT 50' INTERVALS ON STRAIGHT RUNS, AND WHERE SHOWN ON PLANS.
2. PROVIDE BACKFILL PER ARCHITECTURAL SPECIFICATIONS.
3. LOCATE CLEANOUTS WHERE THERE IS 18" CLEAR AROUND.
4. CONSULT LOCAL CODES FOR OTHER FCO REQUIREMENTS.

FLOOR CLEANOUT 11

Scale: NO SCALE P-500

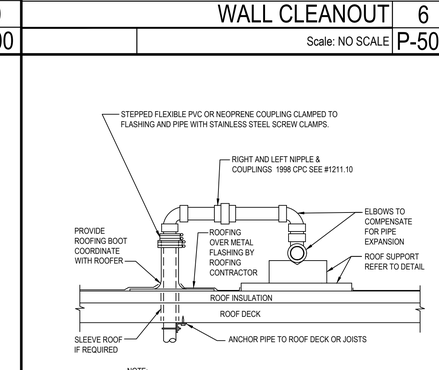

NOTE:
1. ARRANGEMENT SHOWN IS SCHEMATIC. ADJUST TO SUIT FIELD CONDITIONS OR MEET LOCAL CODE REQUIREMENTS.
2. PROVIDE COPPER PIPE, FITTINGS AND CONNECTORS ALL AROUND SINK AND TRAP.

UTILITY/SINK 7

Scale: NO SCALE P-500

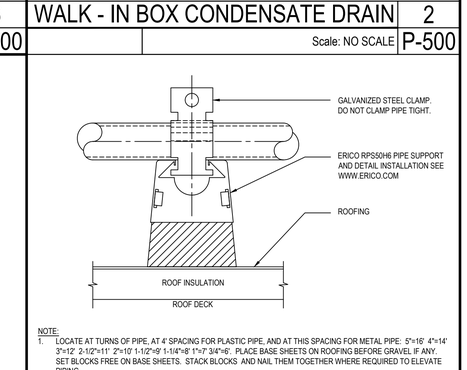

NOTE:
1. VERIFY REQUIREMENTS FOR METERING AND PIPING WITH GAS COMPANY.
2. INSTALL OTHER UTILITIES MINIMUM TEN FEET FROM GAS LINE.
3. PLUMBING CONTRACTOR SHALL PAY ALL GAS COMPANY FEES FOR INSTALLATION.
4. USE WELDED OR SCREWED PIPE AND FITTINGS PER PLUMBING SPECS.
5. GAS COMPANY SHALL EXCAVATE, BACKFILL, AND REPAIR ANY PAVING OR SOD FOR GAS SERVICE LINE INSTALLATION FROM MAIN TO BUILDING.
6. PAINT EXPOSED METAL GAS PIPE, FITTINGS AND ITEMS SAFETY YELLOW.

GAS SERVICE 3

Scale: NO SCALE P-500

NOTE:
1. IF UTILITY IS NOT AT FULL HEIGHT SHOWN. PROVIDE PIPING WITH ELBOWS TO RAISE INLET

QUICK DISCONNECT 18

Scale: NO SCALE P-500

NOT USED 14

Scale: NO SCALE P-500

CONCENTRIC VENT DETAIL 10

Scale: NO SCALE P500

NOTE:
1. PROVIDE WCO WHERE SHOWN ON PLAN. LOCATE ABOVE FIXTURE FLOOD RIM .
2. CONSULT LOCAL CODES FOR OTHER WCO REQUIREMENTS.

WALL CLEANOUT 6

Scale: NO SCALE P-500

NOTE:
1. INSTALL PIPE A MINIMUM OF 76" ABOVE FINISH FLOOR , ANCHORED TO WALL OF BOX WITH SUPPORTS AT MAXIMUM SIX FOOT CENTERS.
2. USE TYPE "M" HARD COPPER TUBE AND FITTINGS WITH LEAD-FREE SOLDER JOINTS.
3. SLOPE HORIZONTAL PIPE AT MINIMUM TWO PERCENT.
4. KEEP DRAIN LINE FROM EVAPORATOR AS HIGH AS POSSIBLE UNDER THE EVAPORATOR BACK TO THE WALL TO MAXIMIZE SHELF SPACE UNDER THE COIL.
5. REFER TO LOCAL CODE FOR INDIRECT DRAIN REQUIREMENTS.
6. INDIVIDUAL CONDENSATE LINES FROM EACH EVAPORATOR TO BE ¾" UNTIL JOINED. CONDENSATE LINE TO BE 1" AFTER UNION.

WALK - IN BOX CONDENSATE DRAIN 2

Scale: NO SCALE P-500

PREP. AREA TRAP PRIMER DETAIL 17

Scale: NO SCALE P-500

NOTE:
1. PROVIDE 1/2" FIBERGLASS INSULATION WITH ALL-SERVICE JACKET WITH VAPOR BARRIER OR APPROVED EQUAL ON ALL COLD WATER, CONDENSATE, AND STORM DRAIN PIPE UP TO 4".
2. PROVIDE 1" INSULATION OR APPROVED EQUAL ON STORM DRAIN PIPE ABOVE 4" SIZE.
3. PROVIDE 1" FIBERGLASS INSULATION WITH ALL-SERVICE JACKET OR APPROVED EQUAL ON DOMESTIC HOT WATER PIPING.
4. REFER TO SPECIFICATIONS FOR FURTHER INFORMATION REGARDING INSULATION. INSTALL ALL ITEMS PER SPECIFICATIONS AND MANUFACTURER'S INSTRUCTIONS.
5. MAINTAIN VAPOR BARRIER ON COLD PIPING BY MEANS OF SEALANT AND TAPE.
6. FLAME-SPREAD AND SMOKE-DEVELOPED INDEXES SHALL NOT EXCEED 25/50.
7. SEAL EXPOSED ENDS OF FIBERGLASS INSULATION WITH ADHESIVE MASTIC.

PIPE INSULATION 13

Scale: NO SCALE P-500

RESTROOM TRAP PRIMER DETAIL 9

Scale: NO SCALE P-500

NOTE:
1. REFER TO PLANS FOR PIPE SIZE(S) AND LOCATION(S).
2. WELDED OR SCREWED FITTINGS AS SPECIFIED FOR PIPE SIZE.
3. LOCATE PENETRATION MINIMUM 18" FROM ADJACENT WALLS.

GAS PIPE ROOF PENETRATION 5

Scale: NO SCALE P-500

NOTE:
1. LOCATE AT TURNS OF PIPE, AT 4' SPACING FOR PLASTIC PIPE, AND AT THIS SPACING FOR METAL PIPE: 5"=16' 4"=14' 3"=12' 2-1/2"=11' 2"=10' 1-1/2"=9' 1-1/4"=8' 1"=7' 3/4"=6'. PLACE BASE SHEETS ON ROOFING BEFORE GRAVEL IF ANY. SET BLOCKS FREE ON BASE SHEETS. STACK BLOCKS AND NAIL THEM TOGETHER WHERE REQUIRED TO ELEVATE PIPING.
2. PRIMER COAT AND PAINT EXTERIOR GAS PIPE SAFETY YELLOW COLOR.
3. 18"x18"x1/2" THICK ROOF WALKWAY MATERIAL FOR BASE SHEET. ("CAREY-TRED" OR PER ARCHITECTURAL SPECIFICATIONS.)

ROOF PIPE SUPPORT 1

Scale: NO SCALE P-500

ISSUE FOR PERMIT 02-06-23

PANDA EXPRESS CHINESE KITCHEN

PANDA EXPRESS, INC.
1683 Walnut Grove Ave.
Rosemead, California
91770
Telephone: 626.799.9898
Facsimile: 626.372.8288

All ideas, designs, arrangement and plans indicated or represented by this drawing are the property of Panda Express Inc. and were created for use on this specific project. None of these ideas, designs, arrangements or plans may be used by or disclosed to any person, firm, or corporation without the written permission of Panda Express Inc.

REVISIONS:

ISSUE DATE:

	PERMIT	02-06-22

DRAWN BY: -

PANDA PROJECT #: D24283
PANDA STORE #: -
ARCH PROJECT #: 261-457

MPW
MPW ENGINEERING, LLC
CERTIFICATE OF AUTHORIZATION #2940 • EXP 06/30/23
110 W. 7TH STREET • SUITE 600 • TULSA, OK 74119
(918) 582-4088 • (918) 582-4087 FAX

SCOTT C. WEBB
LICENSED PROFESSIONAL ENGINEER
18011
2-6-23
OKLAHOMA
SCOTT C. WEBB

PANDA EXPRESS
PANDA HOME 2600
E STATE HWY 152 & N HUNKER TERRACE
MUSTANG, OK

P-500

PLUMBING DETAILS

PANDA HOME 2600 R4

ISSUE FOR PERMIT 02-06-23